

Jacuzzi®

J-CI50 Cartridge Filter

Installation and Operating Instructions



INTRODUCTION

The Jacuzzi® J-C150 cartridge filter is made to last by utilising the best quality materials available. The tank is made from high quality ABS plastics, capable of withstanding the harshest of environments while DuPont Remay elements are used which are regarded by the industry as the best available. Include with this Mircoban antimicrobial coating on the elements and you are sure to achieve one of the cleanest pools possible.

WARNING: DO NOT OVERTIGHTEN LOCKING RING AS THIS MAY CAUSE THE FILTER TO LEAK. GENTLE HAND TIGHT IS SUFFICIENT FOR CORRECT SEALING.

INSTALLATION

1. Ensure the Jacuzzi® J-C150 cartridge filter is located on a clean, stable and level base.
2. The Jacuzzi® J-C150 cartridge filter has three inlet ports (from pump) and one outlet port (to pool/spa). Glue one of the 2" slip tails supplied into one of the inlets and second slip tail supplied into the outlet of the filter that suits the plumbing configuration.
3. Glue in the supplied blanking cap and drain plug cap into the two remaining inlets. Allow a minimum of one hour for glue to dry before subjecting filter to system pressures.
4. Glue water connection pipes from pump and pool return to 2" tails supplied. (Ensure locking nut is placed on pipe before gluing on tails.
5. Apply Teflon tape (not included) to the pressure gauge and screw into lid where indicated.

START UP INSTRUCTIONS

1. Before starting up your Jacuzzi® J-C150 cartridge filter, make sure the cartridge is in the filter and the lid and lock ring are in place and tightened correctly.
2. Open the suction and return line valves (when fitted).
3. Start pump and open the air release valve on the filter lid 2 to 3 turns – air will begin to be forced from the tank. Once water begins to flow from the valve, tighten to close. Check there is a good flow of water back into the pool.
4. Clean the cartridge when the flow to the pool reduces or the pressure gauge increases by 2.5 – 3 PSI.

PUMP PRIMING

1. With the pump OFF, remove the lid from the pump strainer and fill with water to the top of the lit pot.
2. Replace and tighten lid on pump.
3. If valve has been installed on the pump suction line, close before filling strainer. Open again after lid has been securely fastened in place. Any valves on the return lines should be open. The pump should not need to be re-primed unless the pump has been drained for servicing, or winterizing (refer to complete pump operations manual provided with pump).

TO CLEAN FILTER CARTRIDGE

1. Stop pump-close valves on the suction and return lines.
2. Open the air bleed valve on the lid.
3. Proceed to loosen locking ring on filter. As you turn the locking ring, the lid of the filter will be lifted out of the body. Once lid is free of the body, lift lid and locking ring together and place in a clean location. You can now remove the cartridge.
4. Clean the cartridge by soaking it in a mild solution of chlorine and warm water for 15 minutes and then hose off with water. Alternatively, special formulated element cleaning solutions can be purchased from most pool professionals. (Note: do not use high powered water jets to clean – this may cause damage to the element)
5. Replace the cartridge; ensure correct location on the bottom spigot.
6. Insert the top locating spigot into the element.
7. Clean the lid, locking ring and lid 'o' ring. These should be rinsed with clean water to ensure not grit or grime has deposited into the threads. Replace the lid and locking ring onto the top of the filter tank, ensuring correct alignment with the locating spigot.
8. Commence tightening the lid lock ring – the lid will begin to be pulled down into the filter tank. Continue to tighten the lock ring until safety catch locks into place. **DO NOT OVERTIGHTEN LOCKING RING AS THIS MAY CAUSE THE FILTER TO LEAK. GENTLE HAND TIGHT IS SUFFICIENT FOR CORRECT SEALING.**
9. Open the valves – start the pump.

NEVER LOOSEN THE LOCK RING ON THE Jacuzzi® J-C150 Cartridge Filter WHEN THE PUMP IS WORKING

FILTER SPECIFICATIONS

MODEL	PART NO.	FILTER AREA	FLOW RATE GPM	4 HR TURN OVER	6 HR TURN OVER	SHIP lb's	Ship Vol (gallon)
J-C150	53723	150sq ft	117	28080	42120	36.4	13.2

MAINTENANCE OF YOUR FILTER

Your new Jacuzzi® J-C 150 cartridge filter incorporates moving parts and withstands high velocity water with chemicals in it. It is important to note that over time some of these parts will wear in the normal course of use and require regular checks, maintenance and possible replacement.

Performing the maintenance checks below will help to identify parts that have worn and require repair/replacement before further serious damage is sustained. Please note that repair/replacement of moving parts due to regular wear and tear are the responsibility of the pool owner(s) and are not deemed to be covered under warranty. A small amount of regular care and attention to your pool equipment will help ensure long life and trouble free performance.

Maintenance Schedule:

Timing	Maintenance Check	Service action (if required)
Every 2 weeks	Check pressure gauge - If pressure increase is greater than 3 PSI cleaning may be required	In accordance with instructions, clean elements with a high pressure cleaner or purpose element cleaner
Every 3 Months	Check inlet/outlet o'rings for leaks Check operation of pressure gauge – salt water can prematurely reduce the life of a gauge	Isolate Pump, turn power off, clean and grease O rings or replace if necessary Replace gauge if required
Once a year	Compare operating pressure of a cleaned filter to initial pressure (when new). Also check for signs of damage to elements	If pressure is more than 4.5 – 6 PSI different from cleaned elements to new filter, replace elements

Important note: Regular maintenance is important to ensure long life and trouble free performance of your pool equipment. If unable to perform the maintenance yourself, contact www.jacuzzipool.com who will be happy to arrange a trained service technician to perform the maintenance for you.

Record your Equipment details here for quick reference:

Model No.: _____

Serial No.: _____

Initial Pressure (PSI): _____



www.jacuzzipool.com