

JMC16 Sediment Tank Purge Tips



With pump running:

While the water pump is running, simply open the sediment purge valve until the sediment has been flushed out. (Approximate 4 gallons of water needed). This is visible through the clear sediment chamber. Once the sediment has been flushed out, close the purge valve and resume normal filter operation.

Without pump running:

With the pump off, open the air release valve and proceed to open the purge valve. The water will drop through the JMC16 sediment tank flushing out most of the debris from the sediment chamber. Then close the air release valve and turn on the pump and the turbulence of the water entering the sediment chamber will flush out the rest of the sediment. Once the sediment chamber has been cleansed, close the purge valve, start the pump and close the air release valve once water is flowing out through the air release valve.